

FIBERTEK




Wiring loom
Installation manual

MERCEDES

FIBERTEK

Diezmannstr. 22
D-04207 Leipzig

www.4x4fibertek.de
info@4x4fibertek.de


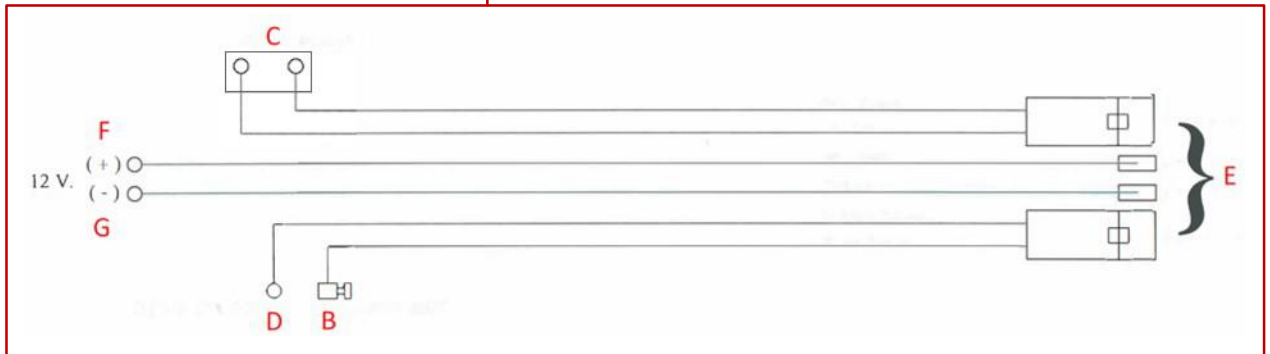


Index

A	Wiring loom		
B	Brake light	yellow	0,5 mm
C	Signal remote	white, brown	0,5 mm
D	Signal defroster (fuse box)	green	0,5 mm
E	Connectors to hardtop		
F	Battery +	red	2,5 mm
G	Battery -	black	2,5 mm




60 min

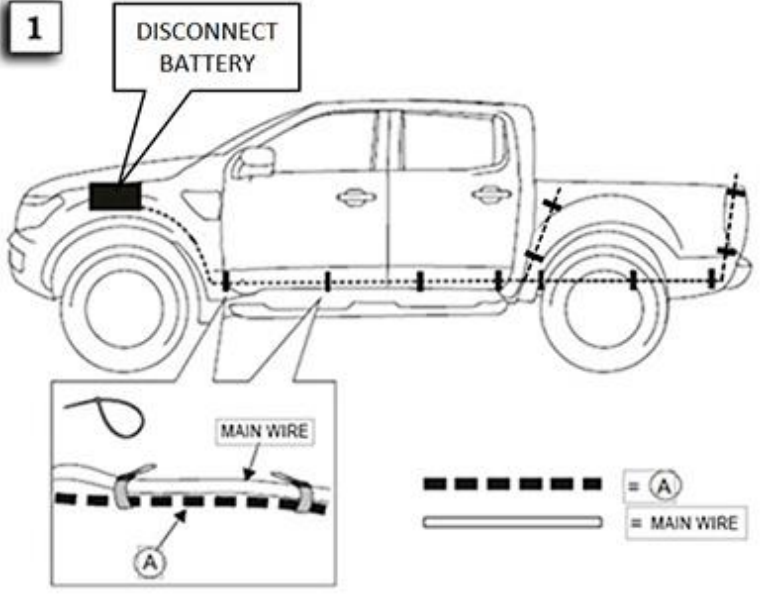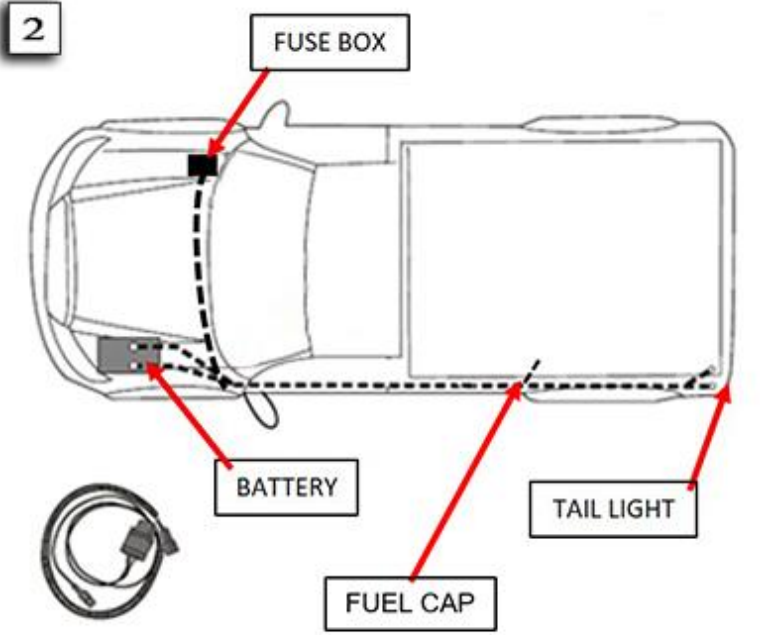
<p>1</p> <p>DISCONNECT BATTERY</p>  <p>MAIN WIRE</p> <p>A</p> <p>A</p> <p>MAIN WIRE</p>	<ol style="list-style-type: none"> 1. Disconnect the battery 2. Pull the wiring loom (A) from the front of the car (D,F,G) to the fuel cap (C) and to the rear left brake light (B, E) 3. Guide the wiring loom over the chassis next to the original cable 4. Strap the wiring loom to the original cable with cable ties
<p>2</p> <p>FUSE BOX</p>  <p>BATTERY</p> <p>FUEL CAP</p> <p>TAIL LIGHT</p> <p>Fuse box = green D Fuel cap = white, brown C Battery = red F, black G brake light = yellow B</p>	<p>Lead the correct colours of the wiring loom to the 4 positions marked on the picture</p> <p>Fuse box = green D Fuel cap = white, brown C Battery = red F, black G brake light = yellow B</p> <p>See picture A</p>



Remove the left brake light

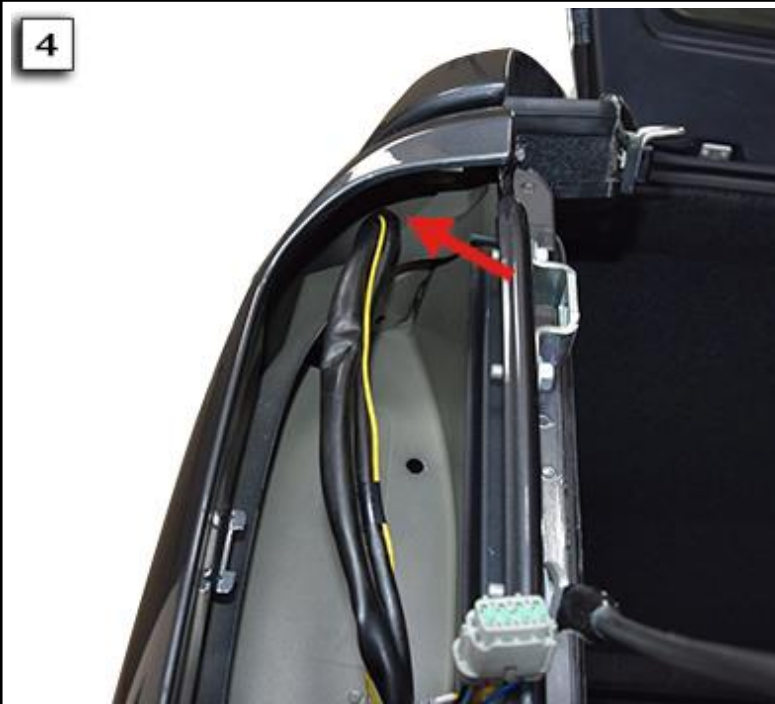

Lead the wiring loom through the existing hole in the left top corner

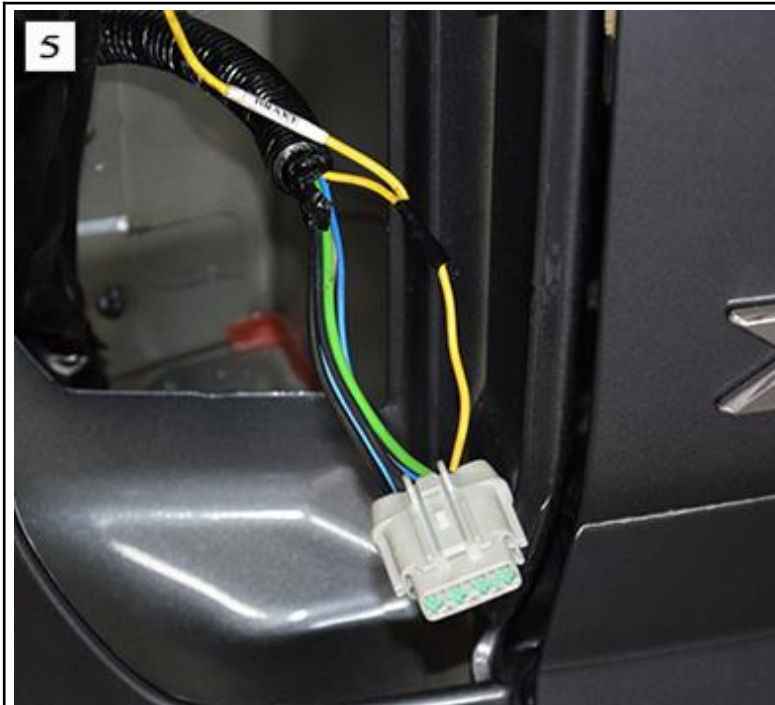

B: signal brake light

Solder the yellow wire (**B**) to the OE yellow wire from the brake light

Yellow to yellow (OE)



C: signal remote:

Remove the plastic protection cap underneath the rear left wheel arch



C) signal remote:


Solder the remote lock cables (C) onto the OE remote signal cables underneath the rear left wheel arch

C: brown and white

Brown to green (OE)
White to grey (OE)




Put the plastic cap back in the correct position

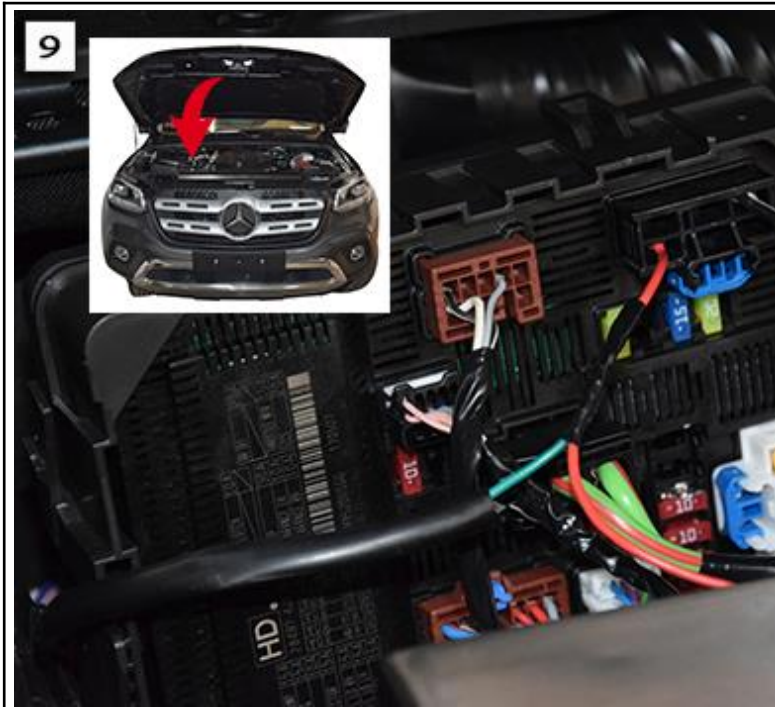

D: signal defroster

Solder the defroster wire (**D**) onto the OE defroster signal wire below the fuse box.

Green to red (OE)

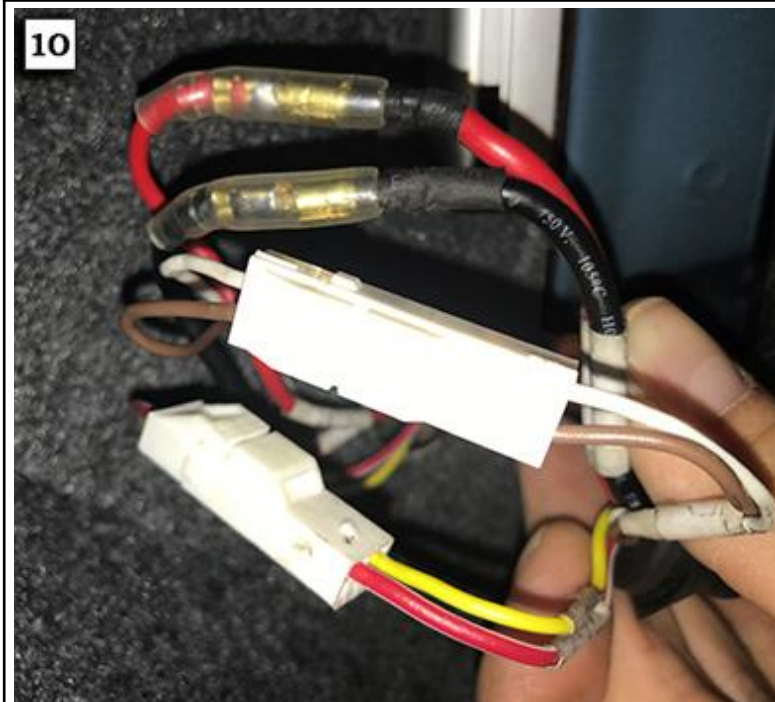


Connect the wiring loom to the loom of the hardtop

11



Put the rubber end of the cable in the provided hole of the hardtop

12

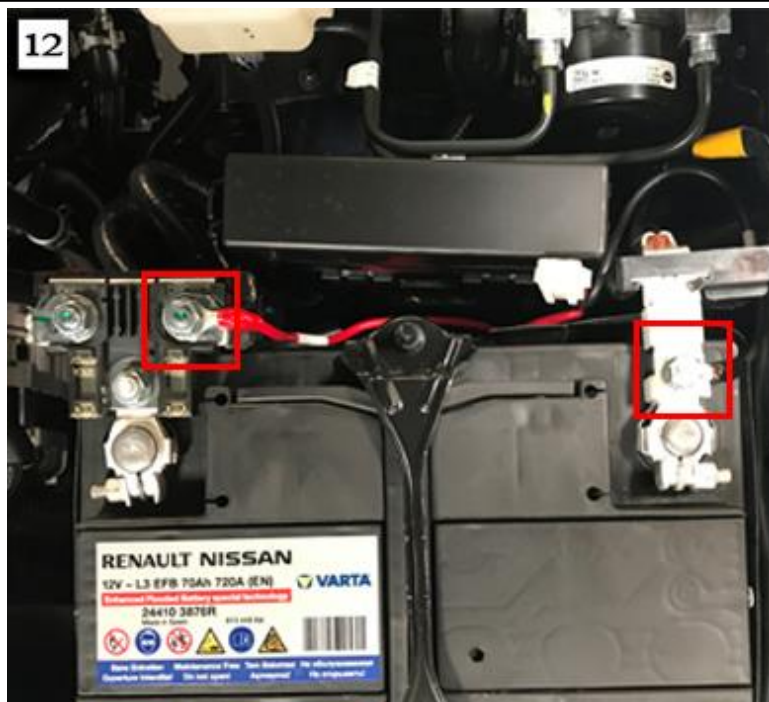

Connect the red wire (F) to battery + and the black wire (G) to battery -

13



Test the following points:

1. Rear defroster - ON/OFF
2. Brake light
3. Interior light
4. OE remote: car door locked = door hardtop locked and vice versa



Wiring loom
Installation manual

MERCEDES X-CLASS