



In case of required assistance call us under: +49 (0)341-49 579 232.

Nissan Navara NP300 2016>

Power Lock

Protect your pickup


1) Please check you have all the required parts before starting installation:

- 1 x Base plate and actuator kit
- 1 x Wiring loom
- 2 x Scotch Locks (you can solder the connections if preferred)
- 8-10 x Cable Ties
- 1 x Rod Lock Latch


1) Open Tailgate, Undo 10 screws and remove metal panel to allow access into the inside of the tailgate



2) Remove the two screws that hold the tailgate handle into the tailgate, Also unclip the locking Rod

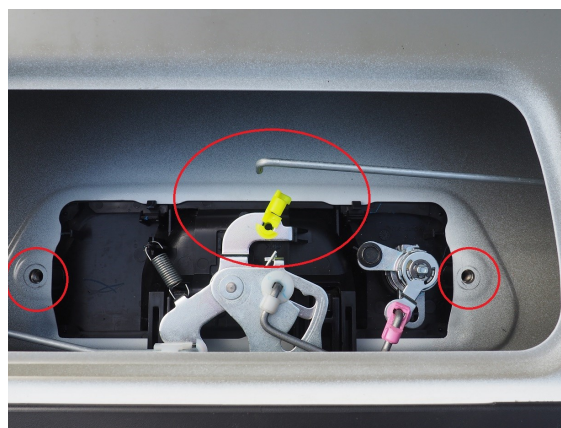


3) Install the base plate and actuator kit, hold in place by replacing the removed screws from no.2

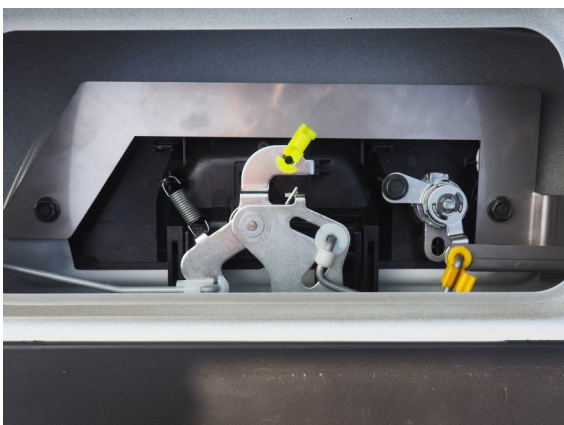

4) Disconnect the Rod from the back of the key barrel and remove the pink plastic clip



5) Attach the Power Lock to the vehicles lock barrel (use new rod lock clip provided) re insert the locking rod into new clip

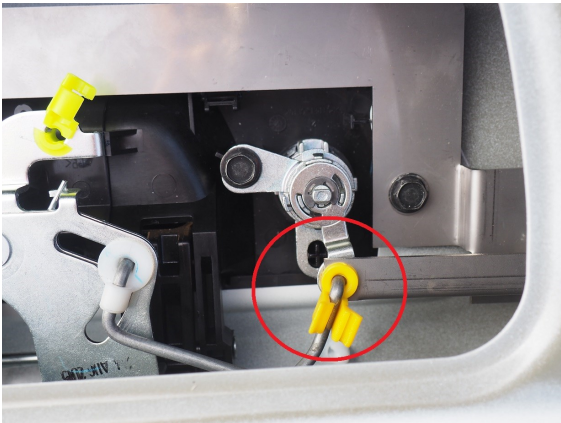


9) Feed cable along chassis towards the front of the Truck—Feed into the Cab



9) Connect cable using the scotch locks (or solder) please ensure the cables get a good connection



6) Re attach the Long rod Latch to Handle

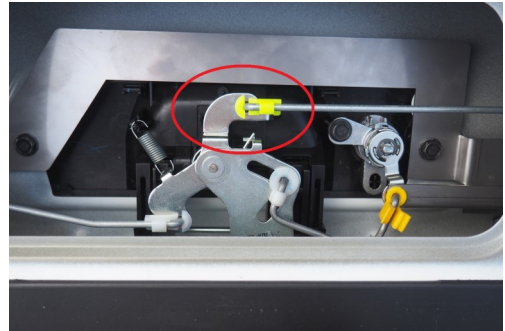

7) Attach the wiring loom to motor. Black to Blue—Red to Red

8) Feed the wiring loom out of the tailgate (hole in the centre of tailgate)

10) Locate the wiring harness in the cab Passengers foot well for RHD. Behind the Kick Plate in the left hand side of footwell



Eagle1 Lock wiring Loom

Vehicle Loom

Black

Beige with silver trace

Red

Light Blue with Silver trace

10) Test the kit works by clicking the central locking and see if the tailgate locks / unlocks.

11) If everything works replace tailgate cover

**Please note we always advise to cover any connections with electrical tape*