



In case of required assistance call us under: +49 (0)341-49 579 232.



VW Amarok 2010>



1) Please check you have all the required parts before starting installation:

- 1 x Base plate and actuator kit
- 1 x Wiring loom
- 2 x Scotch Locks (you can solder the connections if preferred)
- 8-10 x Cable Ties


2) Open Tailgate, Undo 10 screws and remove metal panel to allow access into the inside of the tailgate



3) Remove the two screws that hold the tailgate handle into the tailgate




3) Install the base plate and actuator kit, hold in place by replacing the removed screws from no.3

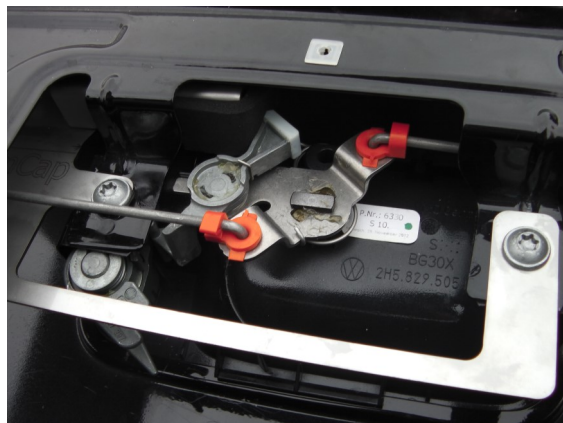

4) Connect wiring loom to the actuator:


Red to Red and Blue to Black

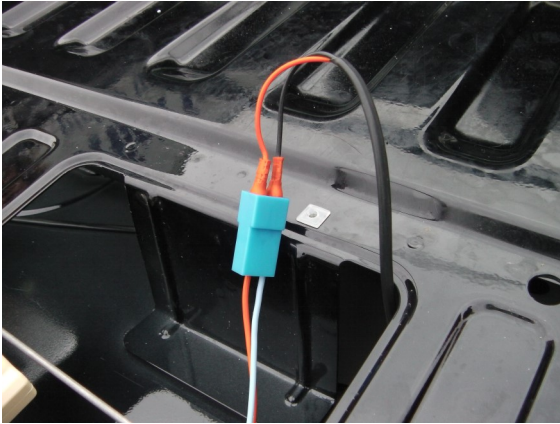

5) Feed Cables out of tailgate and strap tight using cable ties, Feed out towards the side the fuel filler cap is.



7) Feed cable through bumper, either drill a small hole or you can squeeze the cable through a gap on the left side of the bumper. Use the plastic Sheaving to protect the wire

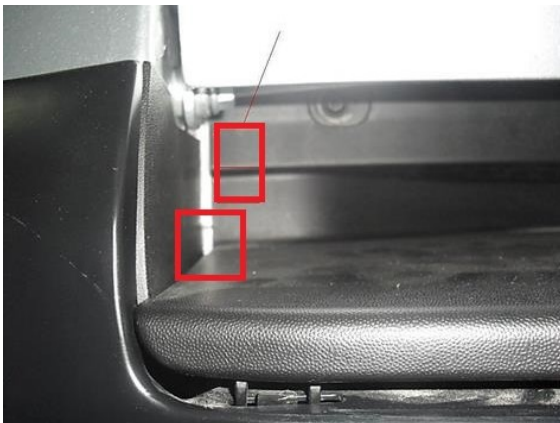

8) Connect the wiring loom to the vehicles central locking, This is found on the underside between the wheel arch and back of truck



9) Connect cable using the scotch locks (or solder) please ensure the cables get a good connection



9a) Connect red to purple (purple on truck)

9b) Connect Black to Brown (brown on truck)

Some New Trucks have different coloured wires.

Connect Red to Yellow (Yellow On Truck)

Connect Black to White (White on Truck)

10) Test the kit works by clicking the central locking and see if the tailgate locks / unlocks.

11) If everything works replace tailgate cover

***Please note we always advise to cover any connections with electrical tape**