Wiring loom

Installation manual

MITSUBISHI/FIAT

Diezmannstr. 22
D-04207 Leipzig

www.4x4fibertek.de
info@4x4fibertek.de

WIRING LOOM

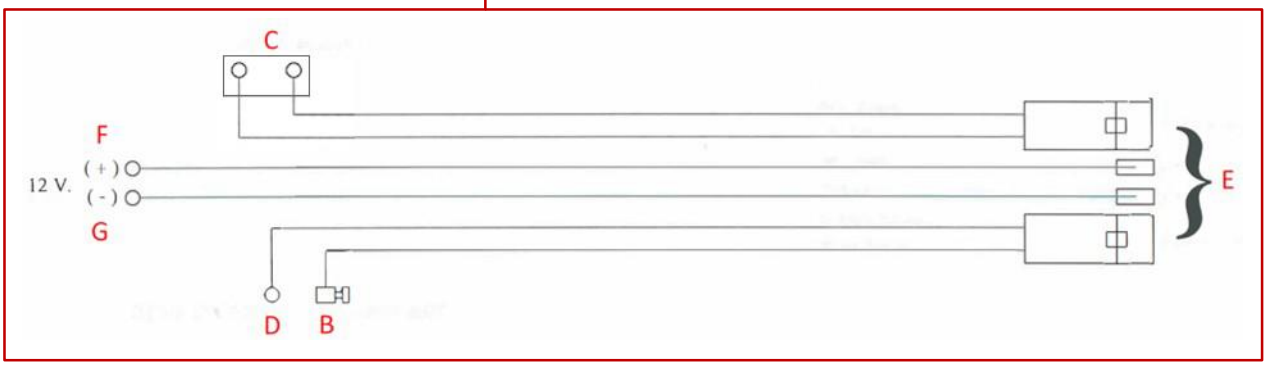

Index

A	Wiring loom		
B	Brake light	yellow	0,5 mm
C	Signal remote	white, brown	0,5 mm
D	Signal defroster	green	0,5 mm
E	Connectors to hardtop		
F	Battery +	red	2,5 mm
G	Battery -	black	2,5 mm

60 min

Diezmannstr. 22
D-04207 Leipzig

www.4x4fibertek.de
info@4x4fibertek.de

INSTRUCTION MANUAL

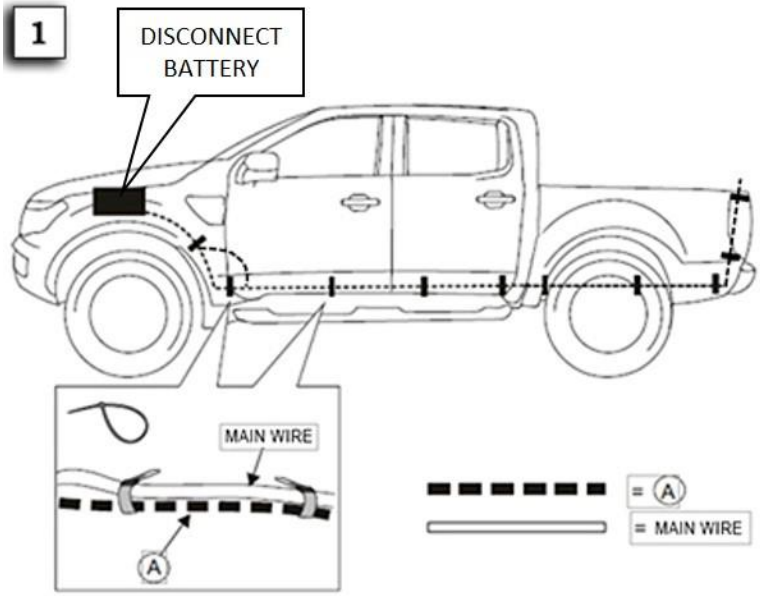

1. Disconnect the battery
2. Pull the wiring loom **(A)** from the front of the car **(C,D,F,G)** to the rear left brake light **(B, E)**
3. Guide the wiring loom over the chassis next to the original cable
4. Strap the wiring loom to the original cable with cable ties

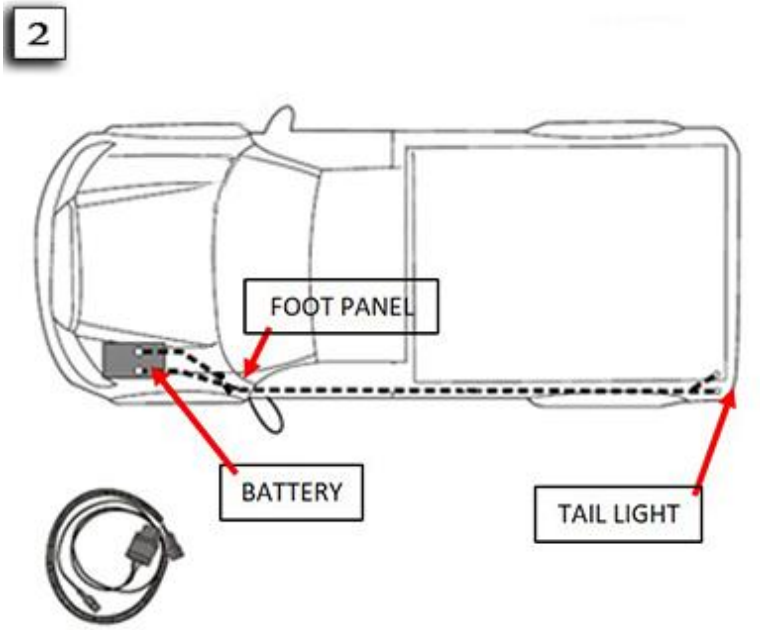

Lead the correct colours of the wiring loom to the 3 positions marked on the picture

Foot panel = green **D**
Foot panel = white, brown **C**
Battery = red **F**, black **G**
brake light = yellow **B**

See picture A

Diezmannstr. 22
D-04207 Leipzig

www.4x4fibertek.de
info@4x4fibertek.de

	Remove the left brake light
	1. Lead the wiring loom **(A)** through the existing hole in the left top corner 2. Tape the yellow wire **(B)** to the wire loom **(A)**. This will not be used.

Diezmannstr. 22
D-04207 Leipzig

www.4x4fibertek.de
info@4x4fibertek.de

	Remove the foot panel cap
	Pull wires C and D through the rubber located beneath the fuel filter housing See step 7

Diezmannstr. 22
D-04207 Leipzig

www.4x4fibertek.de
info@4x4fibertek.de

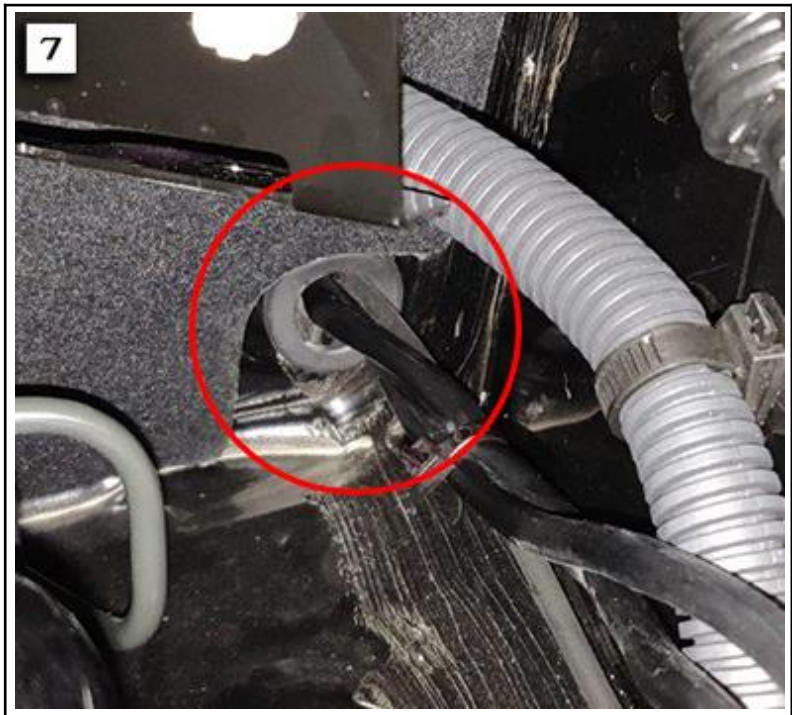

1: Pull the fuel filter housing aside
2: Enter wires **C** and **D** trough te rubber in the fire wall

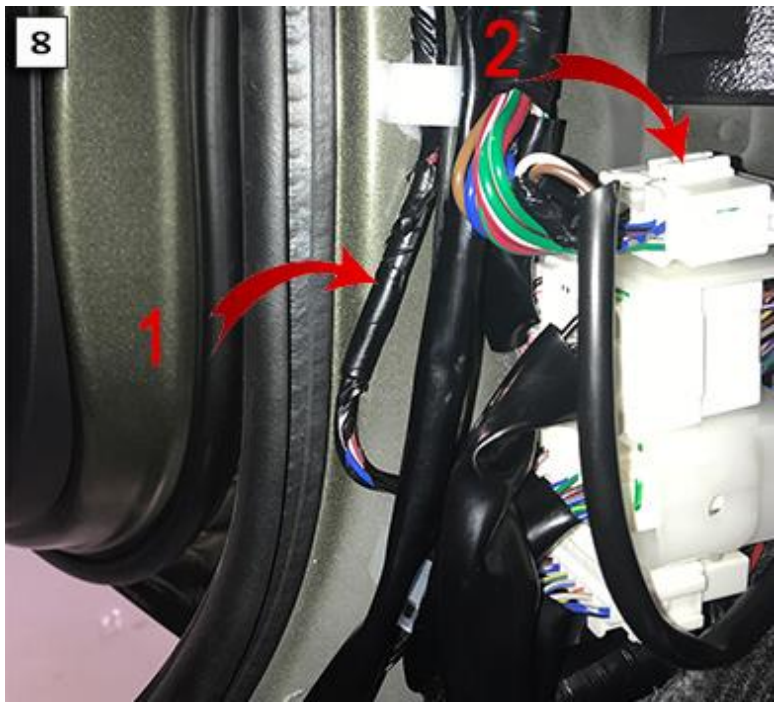

1: signal defroster
Solder the signal defroster wires
Green **(D)** to black/red

2: signal remote:
Solder the signal remote wires
White **(C)** to blue/black with silver dots
Brown **(C)** to blue with silver dots

Tape all solder points with isolation tape

Diezmannstr. 22
D-04207 Leipzig

www.4x4fibertek.de
info@4x4fibertek.de

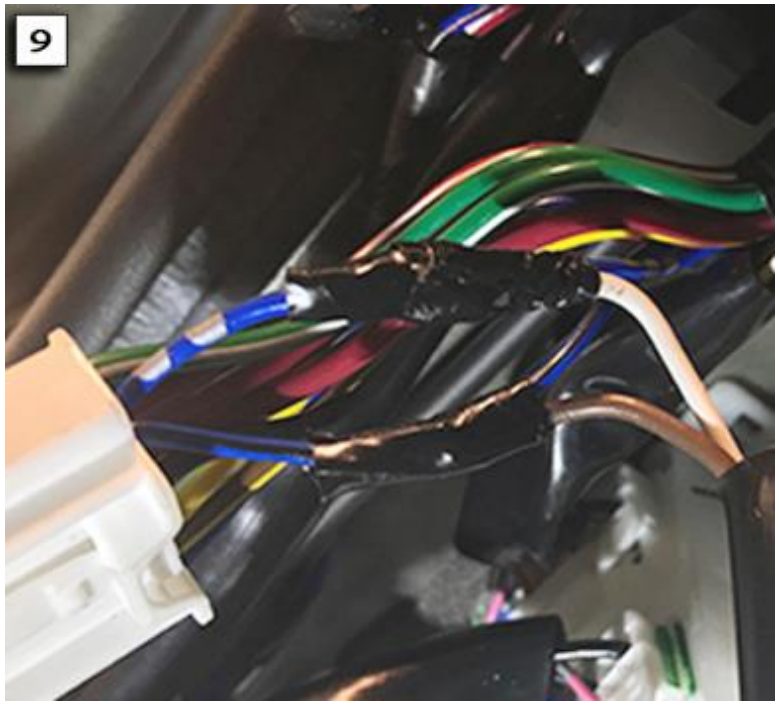	Detail of step 2 (picture 8)
	Put the foot panel cap back in the correct position

Diezmannstr. 22
D-04207 Leipzig

www.4x4fibertek.de
info@4x4fibertek.de

	Put the fuel filter housing back in the correct position
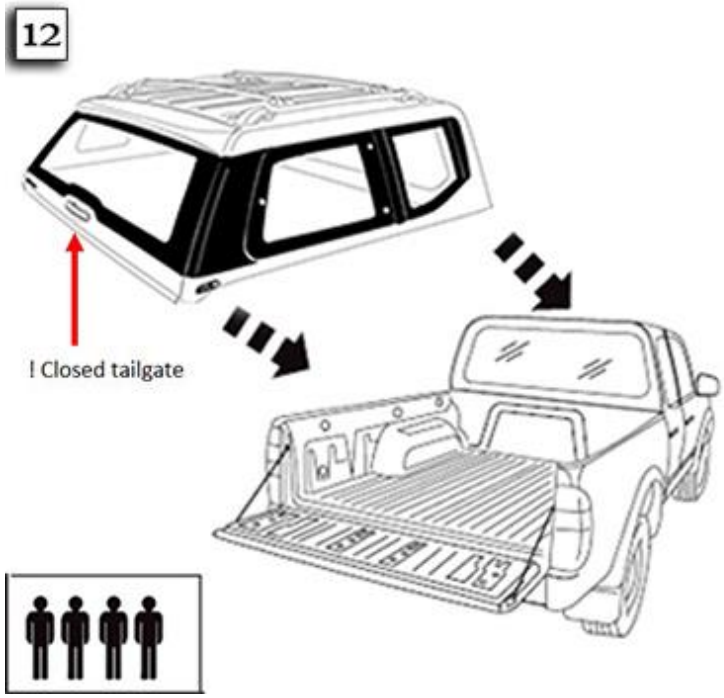	Place the hardtop onto the car with 4 persons (see instruction manual hardtop)

Diezmannstr. 22
D-04207 Leipzig

www.4x4fibertek.de
info@4x4fibertek.de

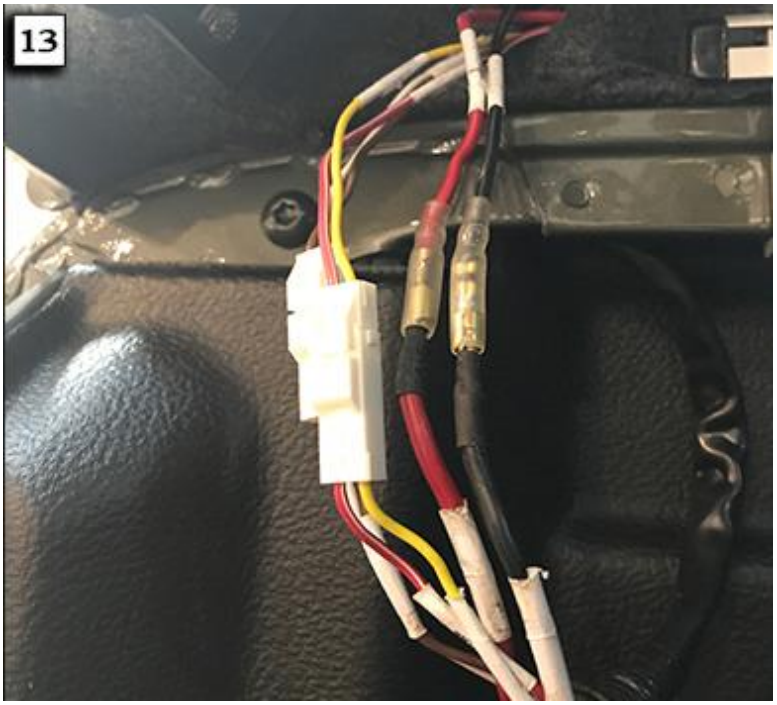	Connec the wiring loom to the loom of the hardtop
	Put the rubber in the provided hole in the hardtop

Diezmannstr. 22
D-04207 Leipzig

www.4x4fibertek.de
info@4x4fibertek.de

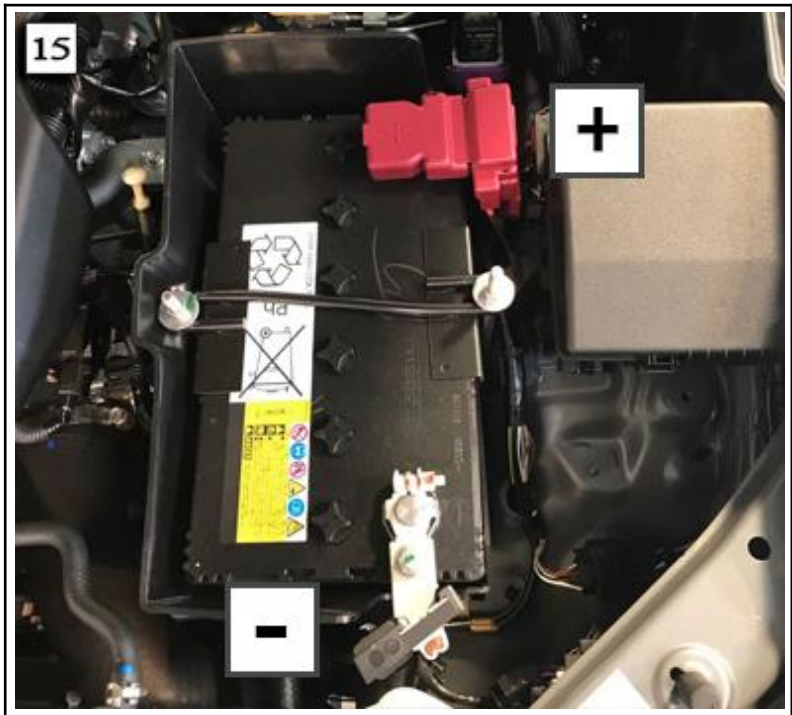

Connect the red wire **(F)** to battery + and the black wire **(G)** to battery -

Test the following points:

1. Interior light
2. OE remote: car door locked = door hardtop locked and vice versa
3. Rear defroster - ON/OFF

Diezmannstr. 22
D-04207 Leipzig

www.4x4fibertek.de
info@4x4fibertek.de

Wiring loom

Installation manual

MITSUBISHI/FIAT

11

Diezmannstr. 22
D-04207 Leipzig

www.4x4fibertek.de
info@4x4fibertek.de